


**SAMSUNG**

# Operating Instructions

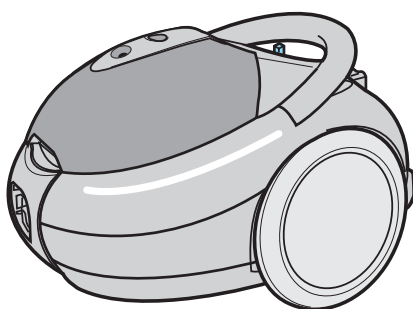

## ***VACUUM CLEANER***



\* Before operating this unit, please read the instructions carefully.

## FEATURES

Features include automatic cord rewind, dust indicator, and sterilization lamp.

**NOTE:** Not all models have the same features.


## IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
2. **WARNING:** Do not use the vacuum cleaner when rug or floor is wet.
3. Close supervision is necessary when any appliance is used by or near children. Do not allow the vacuum cleaner to be used as a toy. Do not allow the vacuum cleaner to run unattended at any time. Use the vacuum cleaner only for its intended use as described in the instructions.
4. Do not use the vacuum cleaner without a dust bag. Change the dust bag before it is full in order to maintain best efficiency.
5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.
6. Avoid picking up hard, sharp object with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put a weight on the hose. Do not block the suction or the exhaustion part.
7. Switch the vacuum cleaner off at the machine before unplugging from the electrical outlet. Grasp the plug to disconnect from power outlet to avoid damage to cord, plug, prongs or socket. Always disconnect cord from electrical outlet before changing the dust bag.
8. The use of an extension cord is not recommended.
9. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
10. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

## WARNING

1. Do not use to suck up water.
2. Do not immerse in water for cleaning.
3. The hose should be checked regularly and must not be used if damaged.

## IDENTIFICATIONS OF PARTS

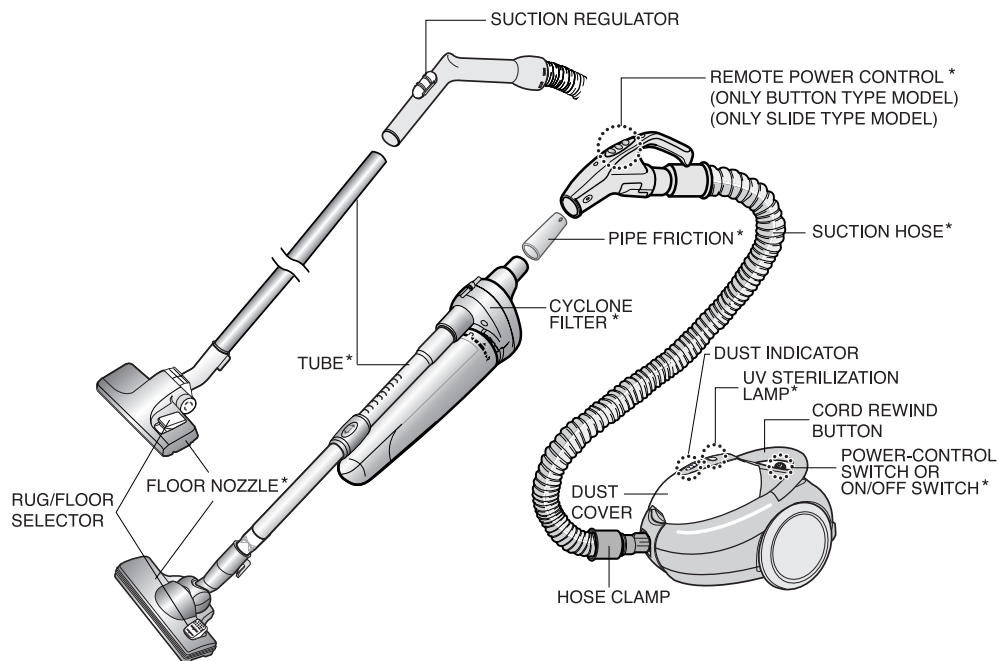

► Features marked \* may vary according to model.




## UV STERILIZATION LAMP

The UV light is effective to kill bacteria in the dust chamber, and when plugged in the light is turned on automatically and keeps performing the bacteria killing operation as long as the light remains on.

Besides, although it is stopped unless it is plugged out it continues killing bacteria in the dust chamber.

## ASSEMBLING THE VACUUM-CLEANER FOR USE

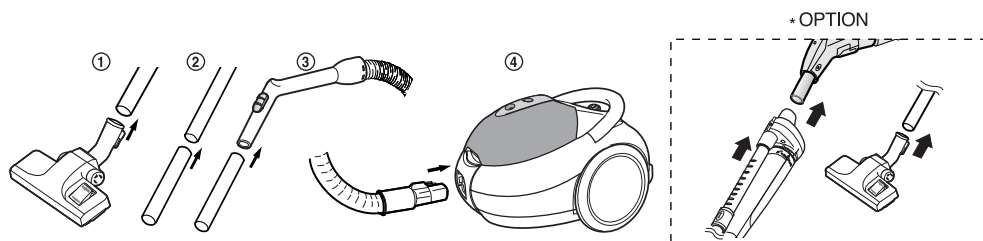

1. Slide the free end of the extension wand into the nozzle tube.
2. Slide the narrow end of one extension wand into the other extension wand.
3. Slide the extension wand into the handle end of the hose.
4. Slide the hose clamp into the suction inlet of the unit.

- \* **Option** ① Assemble the CYCLONIC FILTER with the handle and extension wand (depending on model).  
 ② Adjusting the telescopic tubes (depending on model).

\* OPTION

**EXTENDING** : Holding narrow side of the telescopic tube with a hand, pull the handle to the opposite side of it with another hand.

**SHORTENING** : Push the handle to the narrow side of the tube, holding it with another hand.


## POWER CORD

### 1) PULLING OUT

The power cord is long enough to be drawn out for convenience.

### 2) REWINDING

When you have finished cleaning, disconnect the plug from the electrical outlet and simply press the cord rewind button lightly with your toe.

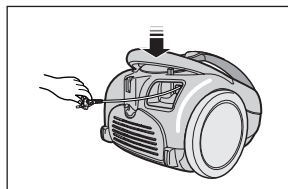

**NOTE:** When removing the power cord from the electrical outlet, grasp the plug, not the cord.


**NOTE:** For your convenience, the handle has two functions. It can be used as a "handle" to carry the unit. It is also the cord rewind button that can be used to rewind the power cord.

## **SUCTION POWER CONTROL (REMOTE POWER CONTROL TYPE ONLY)**
 
### **1) REMOTE POWER CONTROL (BUTTON TYPE)**

The vacuuming power can be adjusted to suit any situation press handle control button.

- **ON/OFF** : Start or stop the vacuum cleaner.
- **LOW/HIGH** : Adjust the suction power by press the button.
- **MAX** : Clean at maximum power by press this button.



### **2) REMOTE POWER CONTROL (SLIDE TYPE)**


The suction capacity can be regulated steplessly by moving the side "A" to the desired position.

- **SLIDE IN THE STOP POSITION**

Vacuum-cleaner switches off (stand by mode)

- **SLIDE TOWARDS MAX**

Suction capacity increases steplessly up to max.

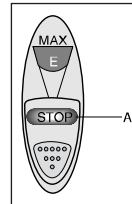


## **POWER CONTROL SWITCH (VARIABLE CONTROL TYPE ONLY)**

The vacuuming power can be adjusted to suit any situation with the electrical power control.

MIN = For Delicate fabrics, e.g.net curtains.


MAX = For hard floors and heavily soiled carpets.

-To adjust power output just turn it right or left.

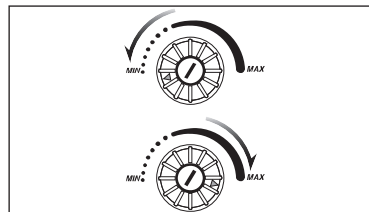

With the cord plugged into an electrical outlet, start or stop the vacuum cleaner by pushing lightly downward on the switch.

**NOTE:** ON/OFF switch is combined with POWER CONTROLLER - To start or stop the unit just lightly press it downward.

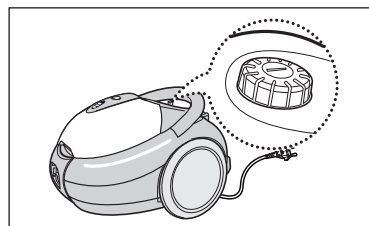

## **DUST - FULL INDICATOR**


If the "Dust-Full" indicator changes to "RED" while you are cleaning, the dust bag requires replacement.

★ As for the "Electronic control type Vac.", all LEDs illumination is same as "RED sign".

**NOTE:** If the "Dust-Full" indicator continues to display "RED" even after changing the dust bag, turn the cleaner off and check whether the hose, tube or nozzle is clogged.


## USING THE ACCESSORIES

### CREVICE

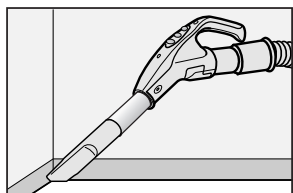


Crevice tool for radiators, crevices, corners, between cushions.

### DUSTING

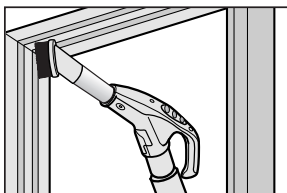


Dusting brush for furniture, shelves, books, etc.

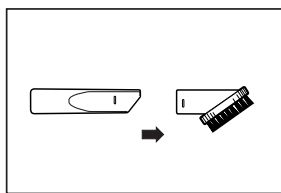

Before use, assemble the dusting brush to the crevice tool.


## TOOL STORAGE

Your cleaner features an tool storage device. Assemble the accessory hanger on to the extension tube. It can be used to store the cleaning tool while they are not in use. This tool can be separated into two parts.

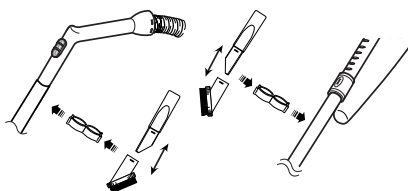


## PARKING POSITION

Located on the top rear side the vacuum cleaner, there is a nozzle support that can be used to park the nozzle during pauses in cleaning.

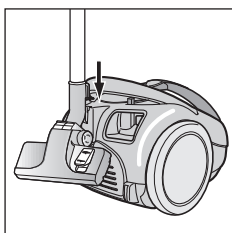


For easy storage and transportation, this vacuum cleaner has a clip system built onto the body, which will keep the tube, hose and nozzle in a vertical position.

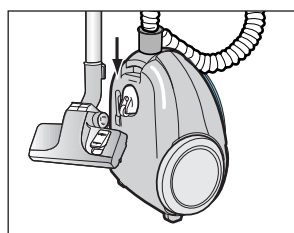


## CARE OF FILTERS

### ► INLET FILTER


To protect the motor, your cleaner features a secondary filter at the front of the motor in the dust compartment. Do not allow the filter to become clogged. Suction power reduction or motor damage may result. After cleaning the secondary filter attach it in place.

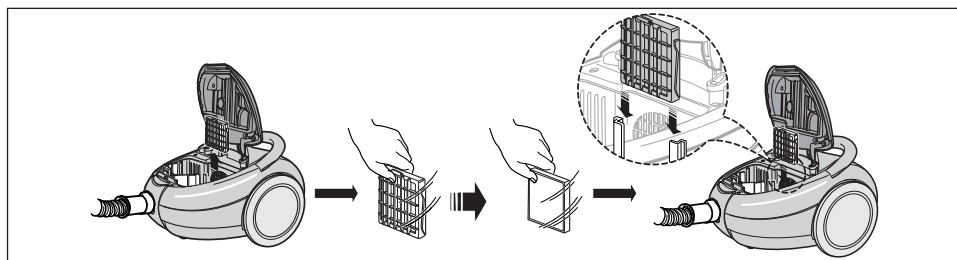

## ► OUTLET FILTER

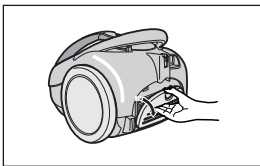

1) Separate the exhaust filter.

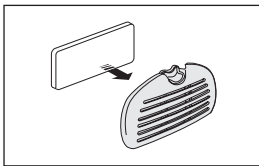

2) Reassemble it after cleaning or replacing the filter in the reverse order.

**NOTE:** The filters must be completely dried before being replaced in the dust compartment.

## **CYCLONIC FILTER(ONLY CYCLONIC FILTER TYPES)**

You can use a dust bag in your cleaner for a long time thanks to the Cyclonic Filter system and it maintain the maximum cleaning efficiency.

The larger particle of dust filtered from Cyclonic Filter remain in Dust Barrel when suctioned air and dust revolves in the Cyclonic Filter. So the dust bag contains only smaller ones.

When the Dust Barrel is filled with dust up to the indicating line, it needs disposing and cleaning.

Dust Barrel can be cleaned in water.

1. Turn the Dust Barrel to the left and pull it.


2. Disconnect the Cyclonic Filter from extension wand and handle.

3. Remove thread and hair tangled around the net.


4. After cleaning the Dust Barrel and Cyclonic Filter, connect the Cyclonic Filter with extension wand and handle (washed part should be dried in the shade thoroughly before assembling).

5. Push and turn the Dust Barrel to the right.


Adjust indicating marks each other carved on Dust Barrel and Cyclonic Filter.

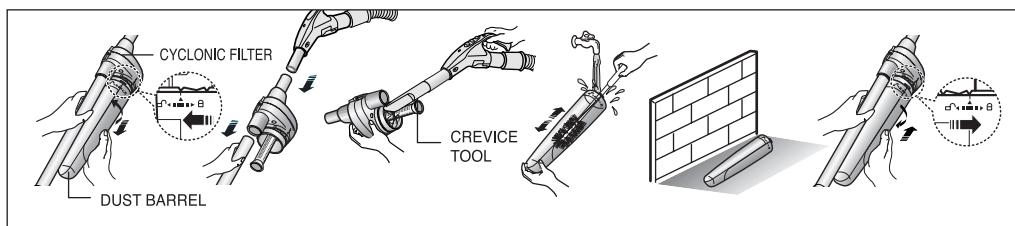


## **REPLACING DUST BAG**

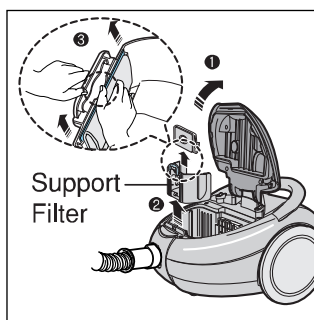

Open the Cover-Dust and lift the Support-Filter.

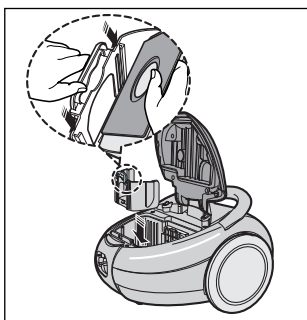

Change the old bag for new one.

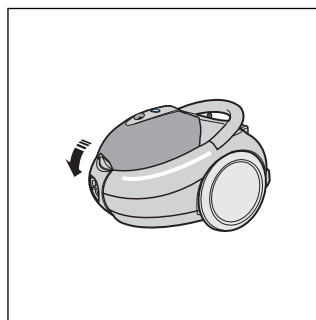

Insert the Support-Filter and close the Cover-Dust.


## FOR CLOTH FILTER BAG

After using, if the cloth filter bag is full of dust, clean the cloth filter bag and use it again.

## USAGE OF FLOOR NOZZLE

### FOR RUG / FLOOR SELECTOR


Before use make sure that the position of the selector is in the right position for the type of surface to be cleaned.

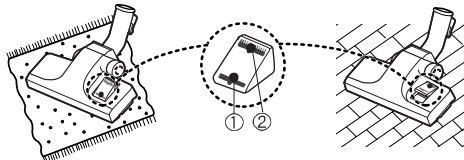

Select the carpet indicator ① when cleaning carpets.

Select flat surface indicator ② when cleaning the floors, tiles, etc.

**NOTE:** For optimum efficiency, clean floor brush with DUSTING BRUSH.

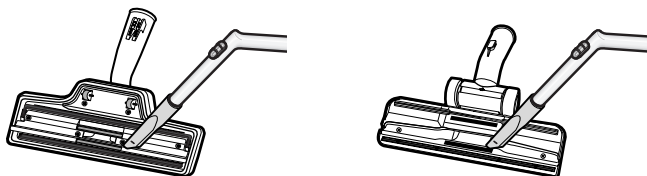

## IF YOU HAVE A PROBLEM

This appliance was inspected thoroughly and was in good operating condition when it was shipped from the factory.

If a minor problem occurs, it can usually be solved quite easily when the cause is found. Therefore, this check list is provided for your convenience.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
Motor does not start.	No power supply.	Check cable, plug and socket.
Suction force is gradually decreasing	Nozzle, suction hose or tube is blocked.	Remove the object.
Cord does not rewind fully.	Check that the cord is not twisted or wound unevenly.	Pull the cord out 2-3m and push down the cord rewind button.

This Vacuum cleaner is approved the following

EMC Directive : 89/336/EEC, 92/31/EEC and 93/68/EEC

Low Voltage Safety Directive : 73/23/EEC and 93/68/EEC